

Mailing Address:  
P.O. Box 1674  
Warsaw, IN 46581-1674



Phone: 844-SEYMOUR  
Fax: 574-267-8508  
[www.SeymourMidwest.com](http://www.SeymourMidwest.com)

## ASSEMBLY INSTRUCTIONS

### Tools Needed for Assembly:






- 1/2" wrench (two)
- Adjustable wrench

### Parts Shipped with Unit:

- Undercarriage Assembly
- Bolt Bag / Axle
- 2 Black Vinyl Grips
- Steel Tray
- Single Wheel  
OR Dual Wheel with Longer Axle Kit

### Assembly Instructions

1. Turn undercarriage over and unfold legs. (figure 1)
2. Bolt on cross braces using 1 short bolt for center and 2 long bolts for ends. (figure 2)
3. *Single Wheel:* Place wheel in between tabs on nose of undercarriage and secure, using axle bolt. (figure 3)  
*Dual Wheel:* Place each wheel on outside of the nose of undercarriage and secure using the longer axle kit (figure 4) (longer shaft, two spacers, two large washers with self-locking nuts)
4. Flip over undercarriage and fasten tray on with 6 short bolts (figure 5)
5. Make sure all bolts are tight.

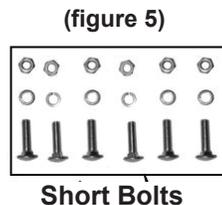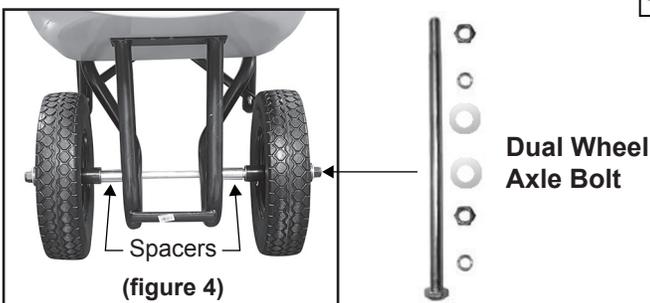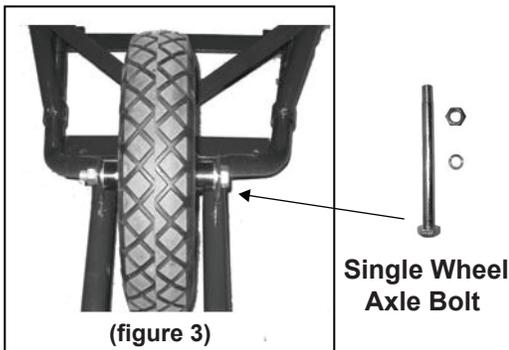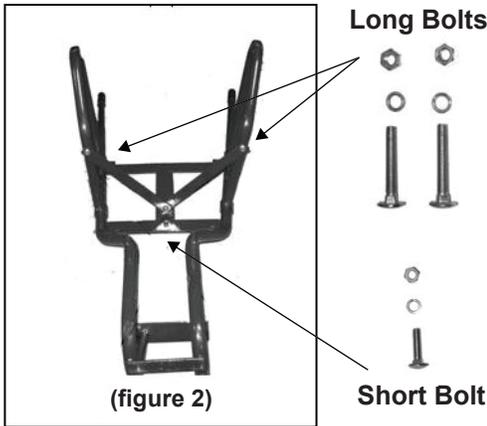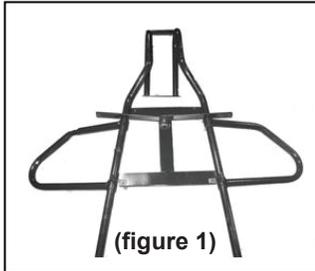

### FULL WARRANTY

All Seymour Midwest products carry a full warranty against manufacturer defects in quality and workmanship. Products which have been abused or worn out normal use are excluded from this warranty. We reserve the right to replace or issue credit on an individual basis.

PK31000  
06/20/16