


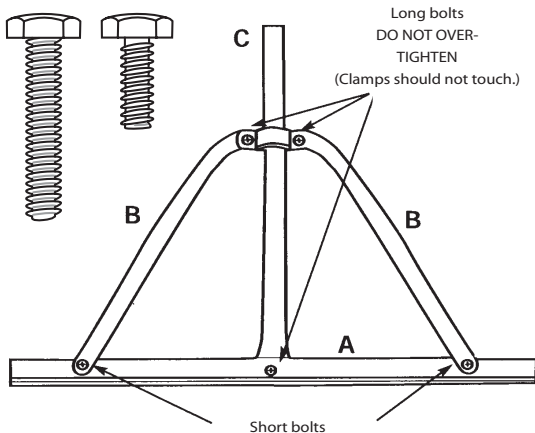

SEYMOUR MIDWEST

GREAT RAKE II / LAKE RAKE ASSEMBLY INSTRUCTIONS

1. Insert the handle, Part "C", into head, Part "A", and fasten.
2. Align holes in one brace, Part "B", with holes in the other brace and start fasteners.
3. Then align the remaining brace slots to the head and fasten.
Snug up braces clamping on to the handle, but **DO NOT OVER TIGHTEN**.



SEYMOUR
MIDWEST

P.O. Box 1674 Warsaw, Indiana 46581-1674
844-SEYMOUR 574-267-8508 FAX
www.seymourmidwest.com